

Constant 12v

Ground

Accessory 12v

Remote Turn On 12v

Power Antenna 12v

Illumination (+)


Dimmer (+)





STANDARD

FUNCTION


 Red

 +12v Ignition

 Yellow

 +12v Battery

 Black


 -12v (-) Neg /


 Blue

 Power Antenn


 Blue/White

 External Ampli

 Orange

 Illumination


 Orange/White

 Dimmer

 Brown

 Phone Mute

Wiring diagram

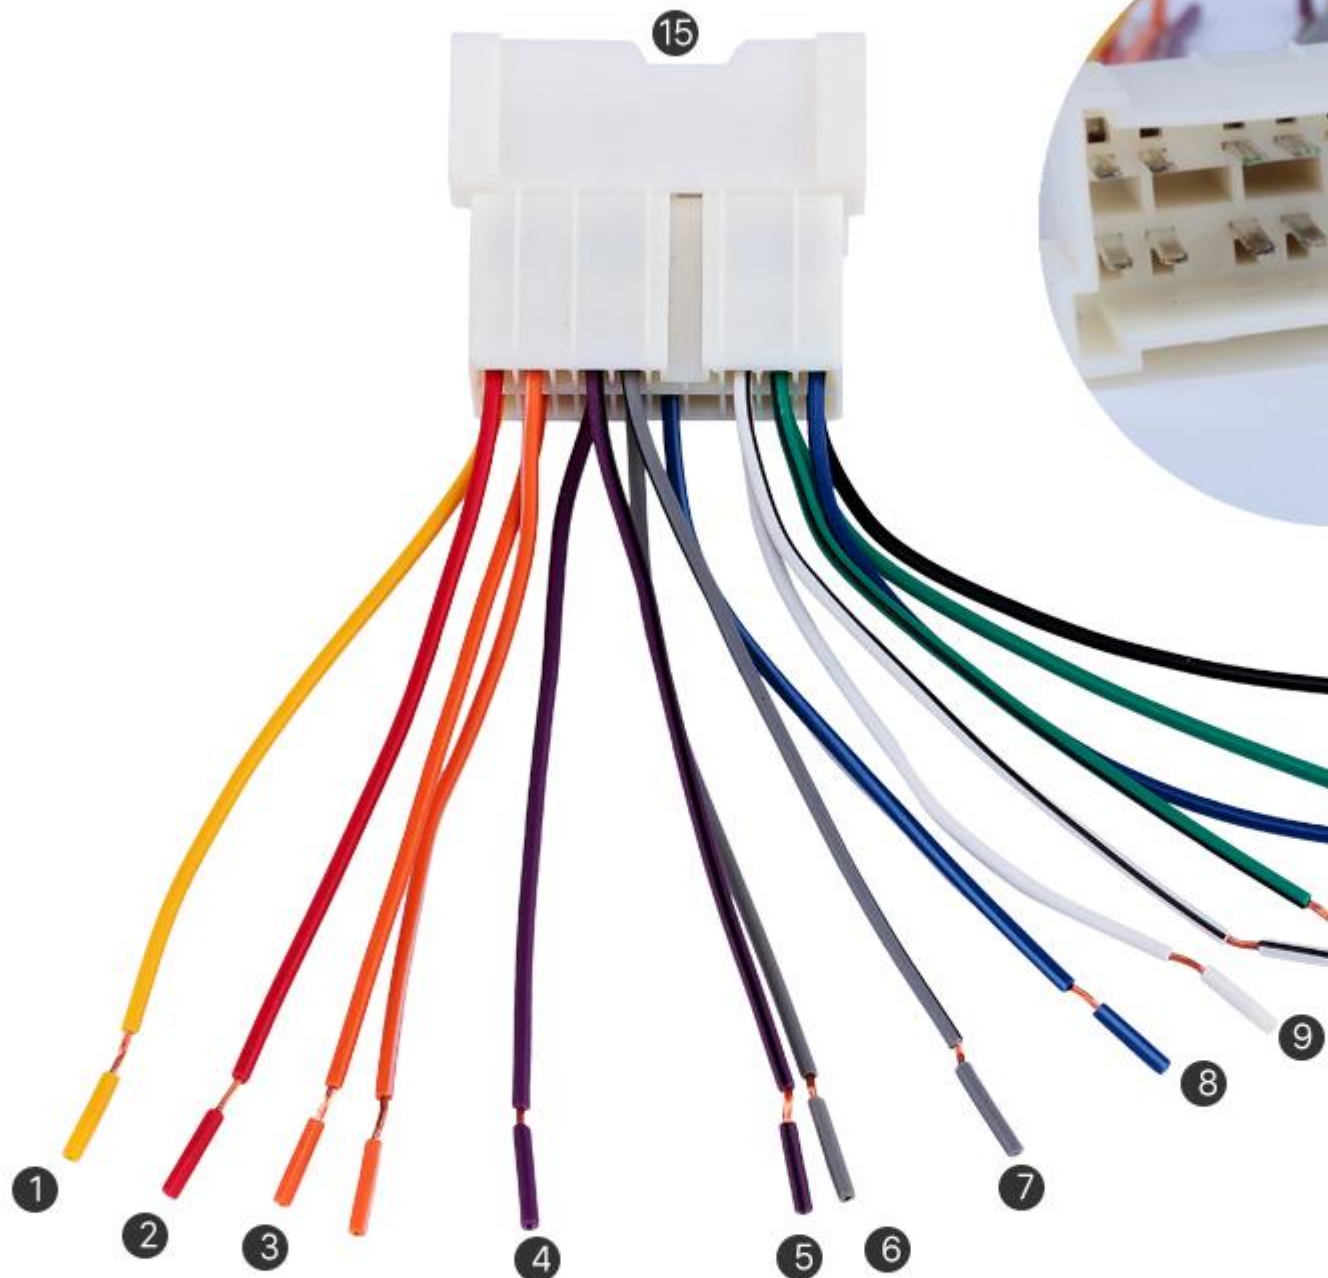

- ① +BATT
- ② ACC
- ③ ILL
- ④ Speaker Right Rear (+)

- ⑨ Speaker Left F
- ⑩ Speaker Left F
- ⑪ Speaker Left F
- ⑫ ANT CON

Aftermarket Stereo

25-1111

SWITCHED IGNITION POWER	
CONSTANT BATTERY POWER	
CHASSIS NEGATIVE GROUND	
ILLUMINATION	
AMPLIFIER TURN ON	
POWER ANTENNA	
DIMMER	
LEFT FRONT POSITIVE	
LEFT FRONT NEGATIVE	
LEFT REAR POSITIVE	
LEFT REAR NEGATIVE	
RIGHT REAR POSITIVE	
RIGHT REAR NEGATIVE	




Power Antenna

Remote Turn On

Battery


Accessory

Illumination

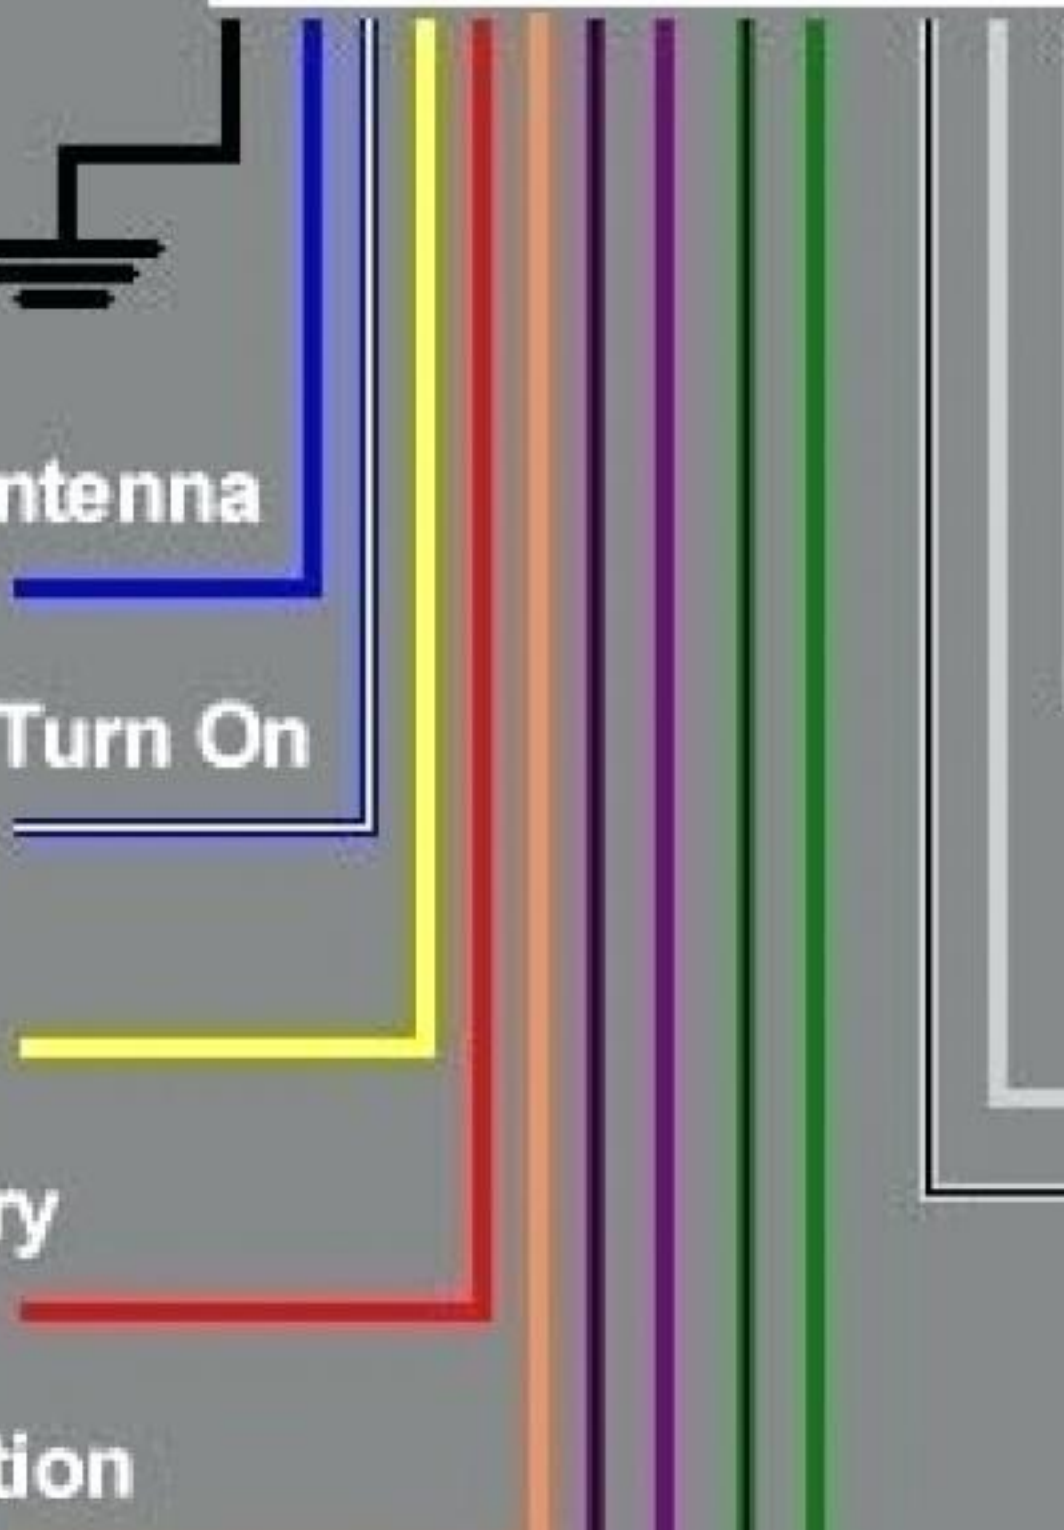

Example of DCI & HU Wiring

Blue (Mute Output Wire) - not used for most head units
For Alpine and Sony wired applications,
connect to HU ATT or MUTE wire

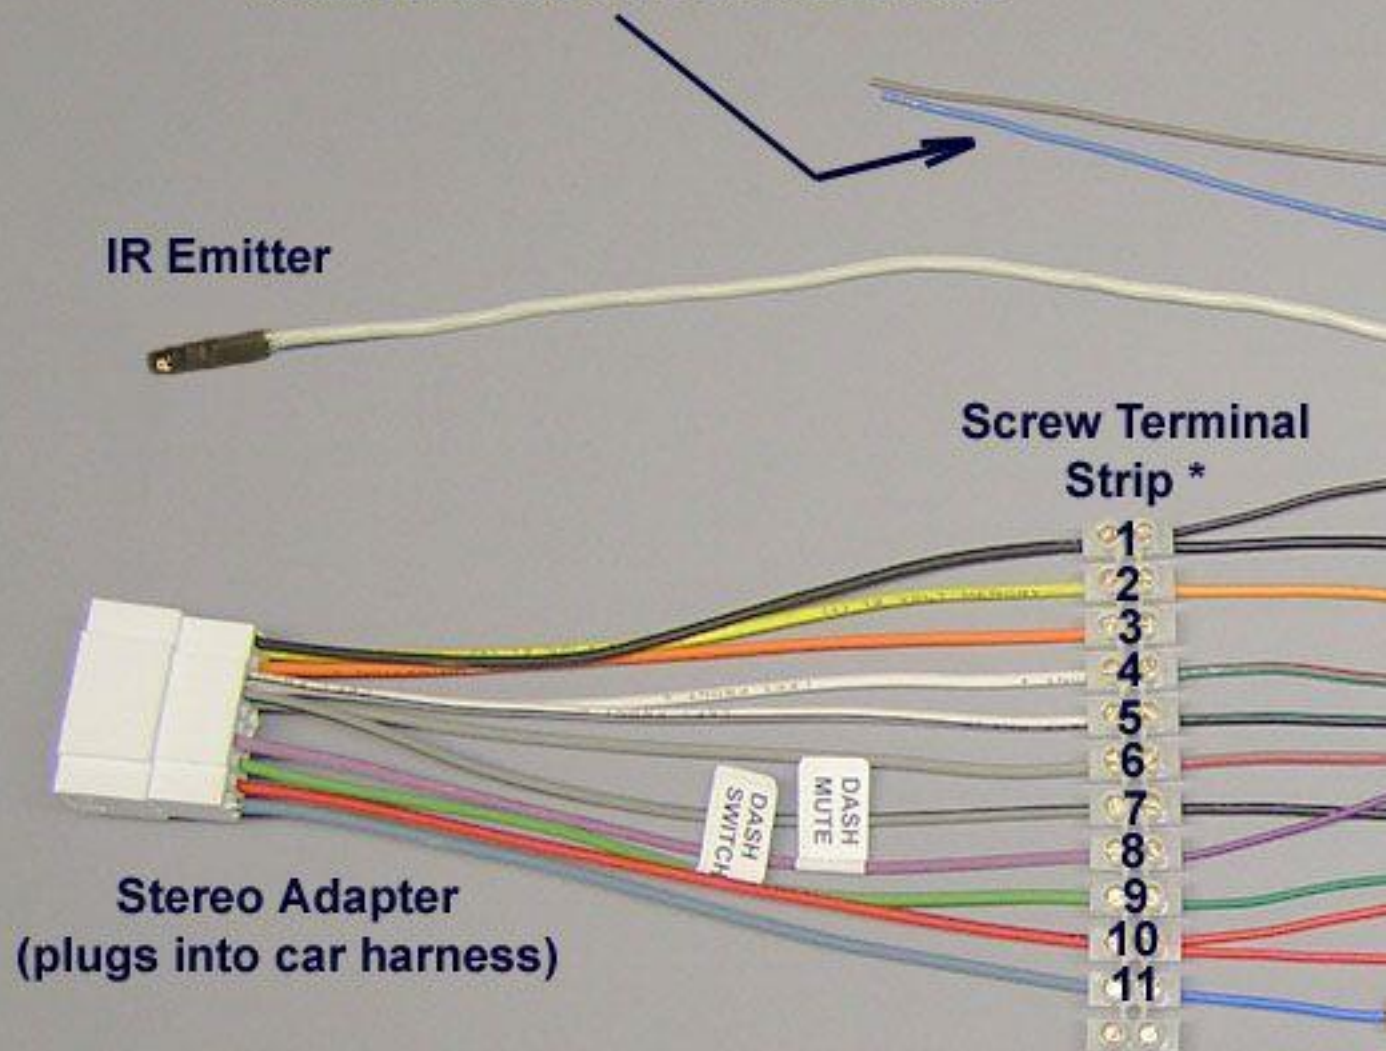

Wire Connection Chart

Adapter Wire

DCI or HU Wire

Chassis Ground -	1 - HU Ground
Battery +12v Power -	2 - HU +12v
Illumination wire -	3 - not used
Front Speakers -	4 to 7 - Front
Dash Mute Switch -	8 - DCI Mute
Dash Mute Switch -	9 - DCI Mute
Dash Mute Switch -	10 - DCI Mute
Dash Mute Switch -	11 - DCI Mute